


YFM660FP WIRING DIAGRAM

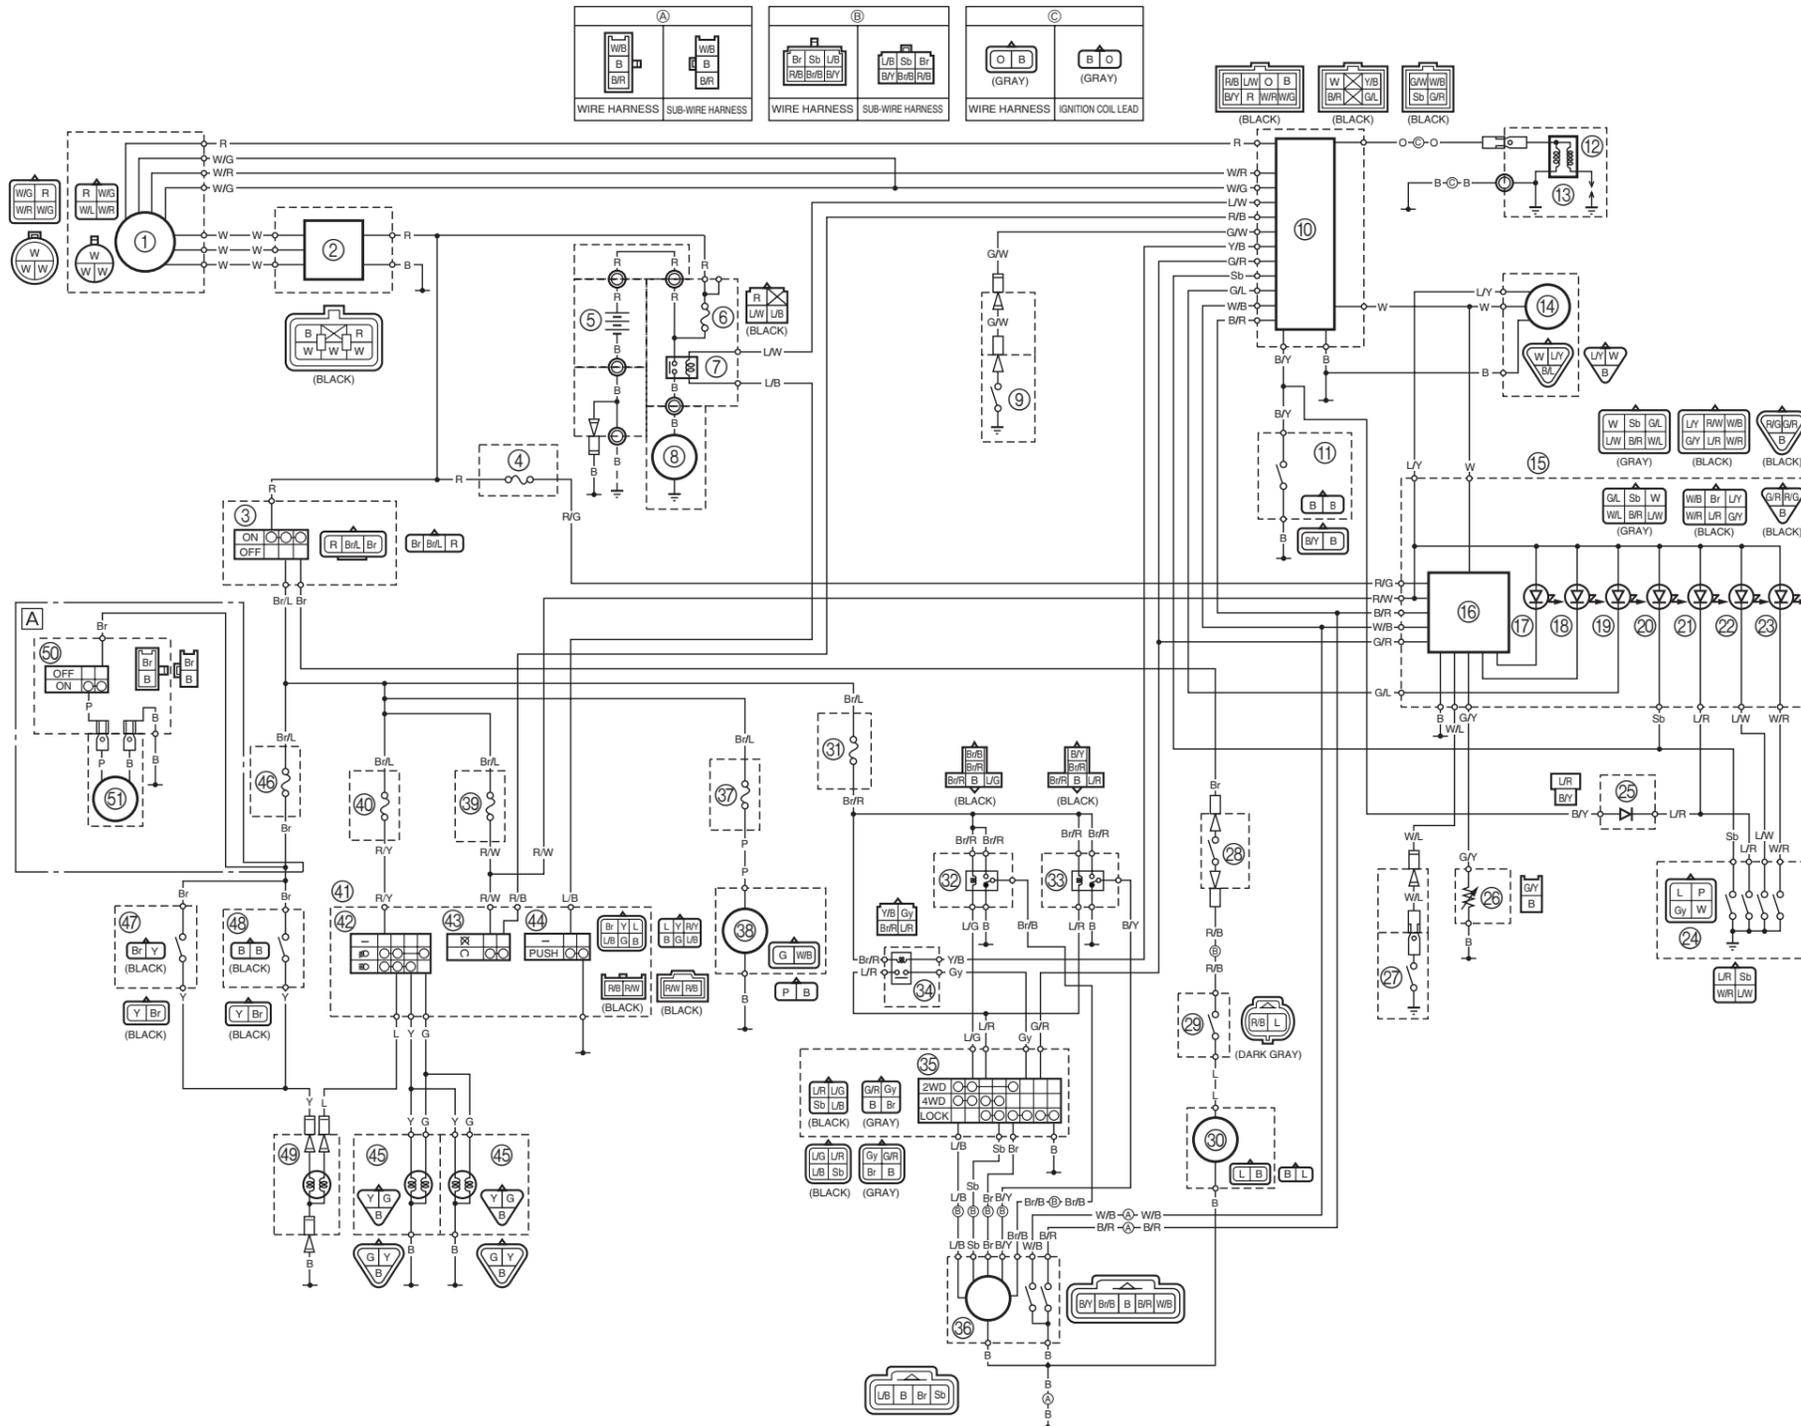

- ① AC magneto
- ② Rectifier/regulator
- ③ Main switch
- ④ Backup fuse
- ⑤ Battery
- ⑥ Main fuse
- ⑦ Starter relay
- ⑧ Starter motor
- ⑨ Reverse switch
- ⑩ CDI unit
- ⑪ Rear brake switch
- ⑫ Ignition coil
- ⑬ Spark plug
- ⑭ Speed sensor
- ⑮ Meter assembly
- ⑯ Multi-function meter
- ⑰ Differential gear lock indicator light
- ⑱ Coolant temperature indicator light
- ⑲ Reverse indicator light
- ⑳ Neutral indicator light
- ㉑ Park indicator light
- ㉒ High-range indicator light
- ㉓ Low-range indicator light
- ㉔ Gear position switch
- ㉕ Diode
- ㉖ Fuel sender
- ㉗ Thermo switch 1
- ㉘ Circuit breaker (fan motor)
- ㉙ Thermo switch 2
- ㉚ Fan motor
- ㉛ Four-wheel drive fuse
- ㉜ Four-wheel drive relay 1
- ㉝ Four-wheel drive relay 2
- ㉞ Four-wheel drive relay 3
- ㉟ On-command four-wheel drive switch and differential gear lock switch
- ㊱ Gear motor
- ㊲ Auxiliary DC jack fuse
- ㊳ Auxiliary DC jack
- ㊴ Ignition fuse
- ㊵ Headlight fuse
- ㊶ Handlebar switch (left)
- ㊷ Light switch
- ㊸ Engine stop switch
- ㊹ Start switch
- ㊺ Headlight
- ㊻ Signaling system fuse
- ㊼ Rear brake light switch
- ㊽ Front brake light switch
- ㊾ Tail/brake light
- ㊿ Horn switch
- 1 Horn

Ⓐ For Europe and Oceania

COLOR CODE

B Black
 Br Brown
 G Green
 L Blue
 O Orange
 P Pink
 R Red
 Sb Sky blue
 Gy Gray

W White
 Y Yellow
 B/R Black/Red
 B/Y Black/Yellow
 Br/B Brown/Black
 Br/L Brown/Blue
 Br/R Brown/Red
 G/L Green/Blue
 G/R Green/Red

G/W Green/White
 G/Y Green/Yellow
 L/B Blue/Black
 L/G Blue/Green
 L/R Blue/Red
 L/W Blue/White
 L/Y Blue/Yellow
 R/B Red/Black
 R/G Red/Green

R/W Red/White
 R/Y Red/Yellow
 W/B White/Black
 W/G White/Green
 W/L White/Blue
 W/R White/Red
 Y/B Yellow/Black